

כניסה לתפריטים במצלמת מיני 18 PTZ zoom




שלב 1: על מנת להגיע לתפריט ההגדרות, יש לוודא כי:

- המצלמה מחוברת למתח
- חיבור RS-485 תקין (ישנה שליטה מלאה על המצלמה)


שלב 2: כניסה לתפריט הגדרות מצלמה

- הפעל **Preset 70** לכניסה לתפריט הגדרות מצלמה.

תפריט הגדרות ראשי יופיע:

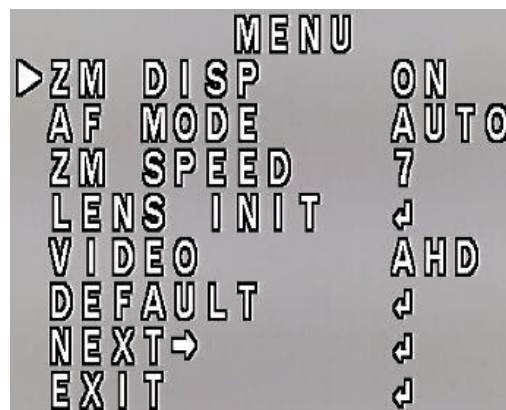


a. לחץ על **Zoom(-)** עד שהסמן יגיע ל **NEXT**

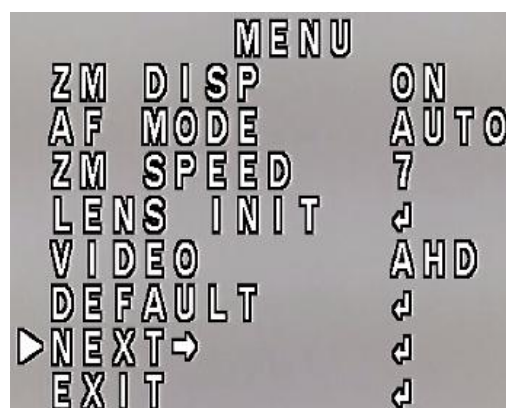

i. הפעל **Preset 70** שוב (מבצע פעולת **Enter**) על מנת

להיכנס לתת-תפריט **NEXT**

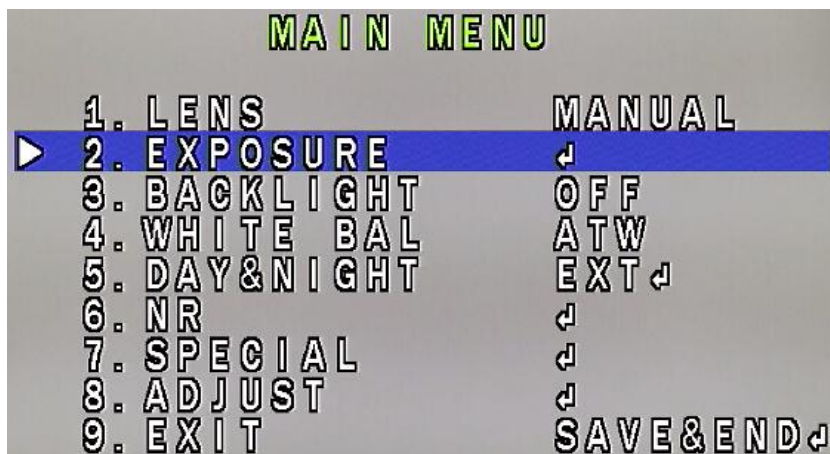

1. ודא כי הסמן נמצא על **Exposure** ולחץ 3 פעמים

על **Focus (-)** ומיד אחר כך הפעל **Preset 70**.

כעת הינך נמצא במסך הגדרות. ודא כי הסמן נמצא


ב **Monitor out**




2. שנה את מוד העבודה **AHD** באמצעות כפתור

Focus (+) או **Focus (-)** למצב הרצוי (**AHD**,

THD, CHD, CVBS):

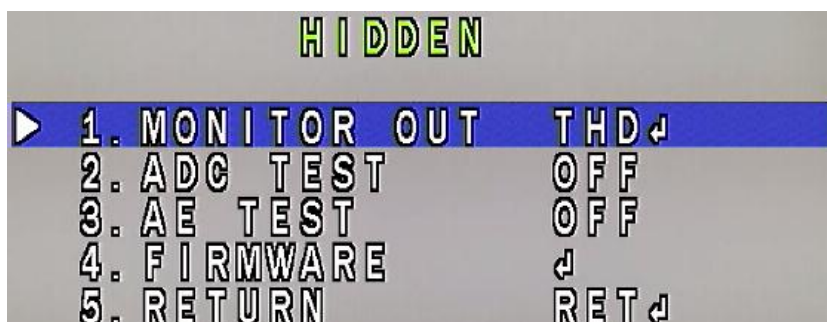

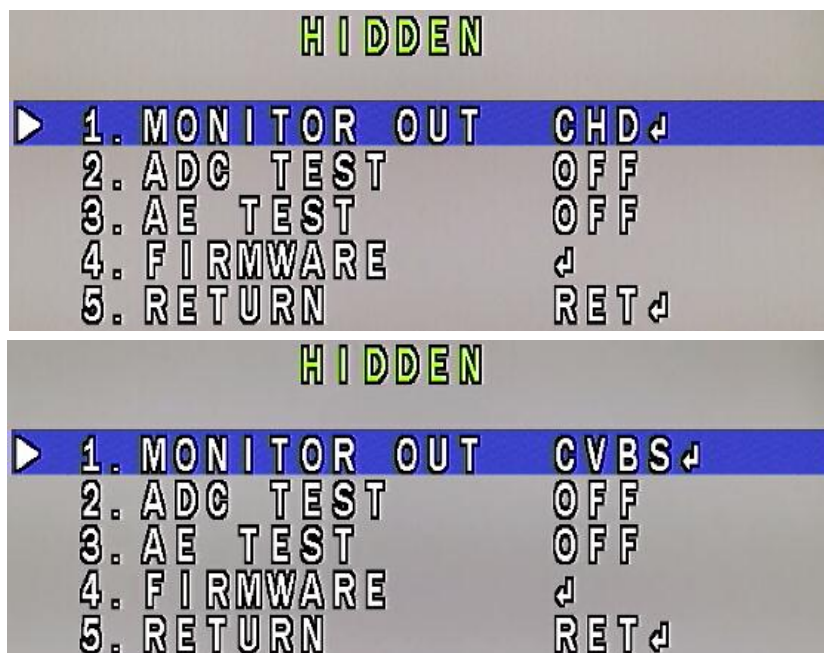

3. לאחר בחירת מוד העבודה, הפעל **Preset 70**

לאישור.

4. לאחר הרצת **Preset 70** תופיע על המסך הודעת

אישור. לחץ על **Focus (-)**. כעת **Apply** יהבהב.

5. הפעל **Preset 70** לאישור.



2. איפוס להגדרות יצרן:

a. על מנת לאפס את המצלמה להגדרות יצרן, יש להריץ

PRESET 96

Description:

Enter the movement menu, please follow the instructions as below:

“**ZOOM+**”: Control the menu option to move up;


“**ZOOM-**”: Control the menu option to move down;

“**FOCUS+**”: Switch the option to page up;


“**FOCUS-**”: Switch the option to page down;

“**INVOKE PRESET No. 70**”: Confirm;


1、 Invoke preset No.70 to enter the movement menu, as shown in the figure below:

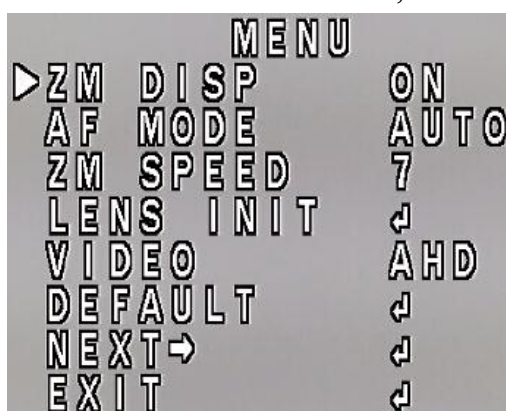

2、 Click the "ZOOM-" to move the cursor to "NEXT", as shown in the figure below:

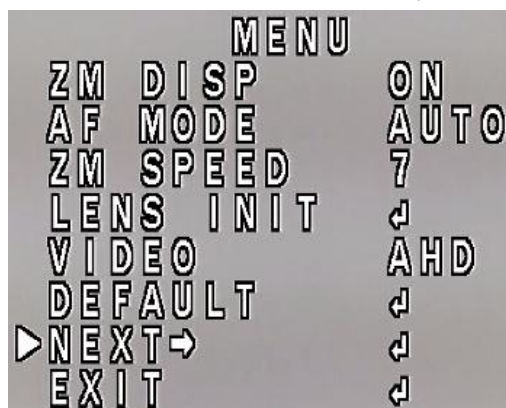



3、 Invoke preset No.70 to enter the next menu, and click the "ZOOM-" to move the cursor to“2.EXPOSURE”, as shown in the figure below:

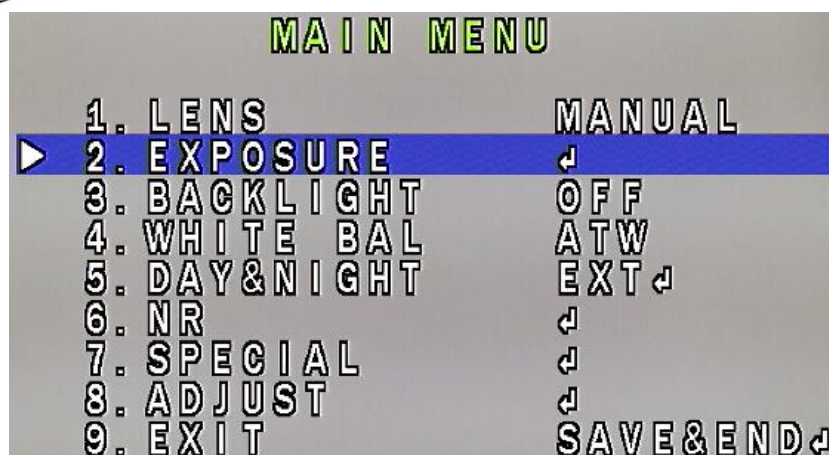


- 4、 The cursor stays on "EXPOSURE", and click "FOCUS+" (or FOCUS-) three times in succession, then invoke preset No.70 to enter the mode selection interface, as shown in the figure below:



- 5、 As shown in the figure above, "1.MONITION OUT" is the movement mode selection option, click "FOCUS+" (FOCUS+) or "FOCUS-" key , you can switch in AHD, THD, CHD, CVBS mode, as shown in the figure below:

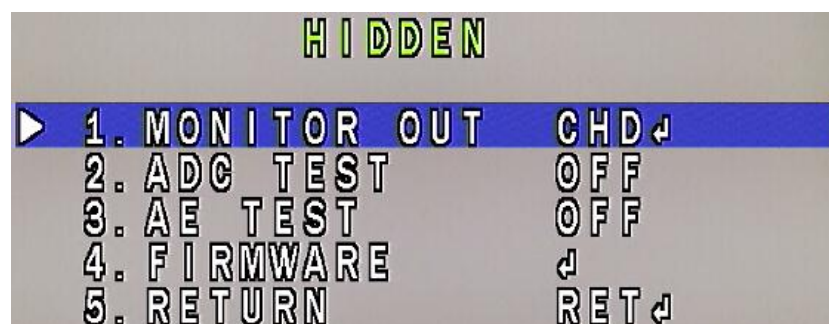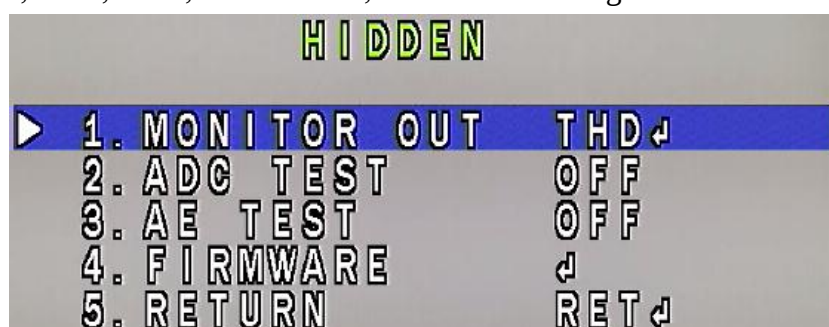

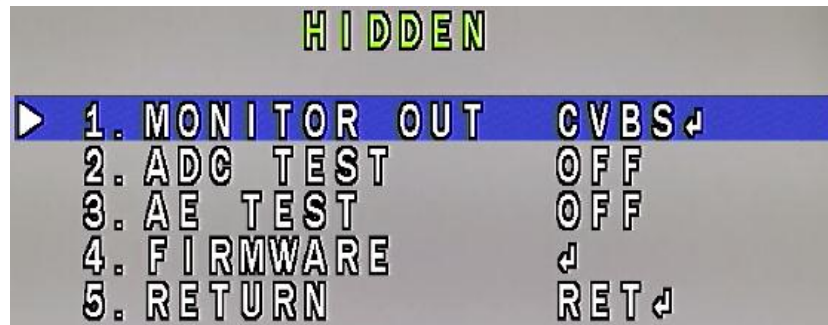

6、 Select the mode you need, invoke preset No.70 and confirm, it will jump out of confirmation interface at this time, as shown in the figure below. Click "FOCUS-" to select "APPLY" option, then invoke preset No.70 and confirm.

